7X 12W RGBW Beam

3pin dmx in and out
Lcd display
9 or 16 Dmx Channels
Hanging Clamps

9 channel mode

Channel	Function	Description
1	Pan	0-255
2	Tilt	0-255
3	Whole dimmer	0-255
4	R dimmer	0-255 Red dimmer
5	G dimmer	0-255 Green dimmer
6	B dimmer	0-255 Blue dimmer
7	W dimmer	0-255White dimmer
8	Strobe	0-255Strobe from slow to fast
9	Motor speed	0-255 X Y movement speed

16 Channel Mode

Channel	Function	Description
1	Pan	0-255
2	Tilt	0-255
3	Master dimmer	0-255
4	R dimmer	0-255 Red dimmer
5	G dimmer	0-255 Green dimmer
6	B dimmer	0-255 Blue dimmer
7	W dimmer	0-255White dimmer
8	Strobe	0-255Stroube from slow to fast
9	Motor speed	0-255 X Y movement speed
10	Color macro	0-255
11	No function	
12	Auto program	
13	Auto program speed	
14	Pan fine	0-255
15	Tilt fine	0-255
16	Reset	150-200 Reset

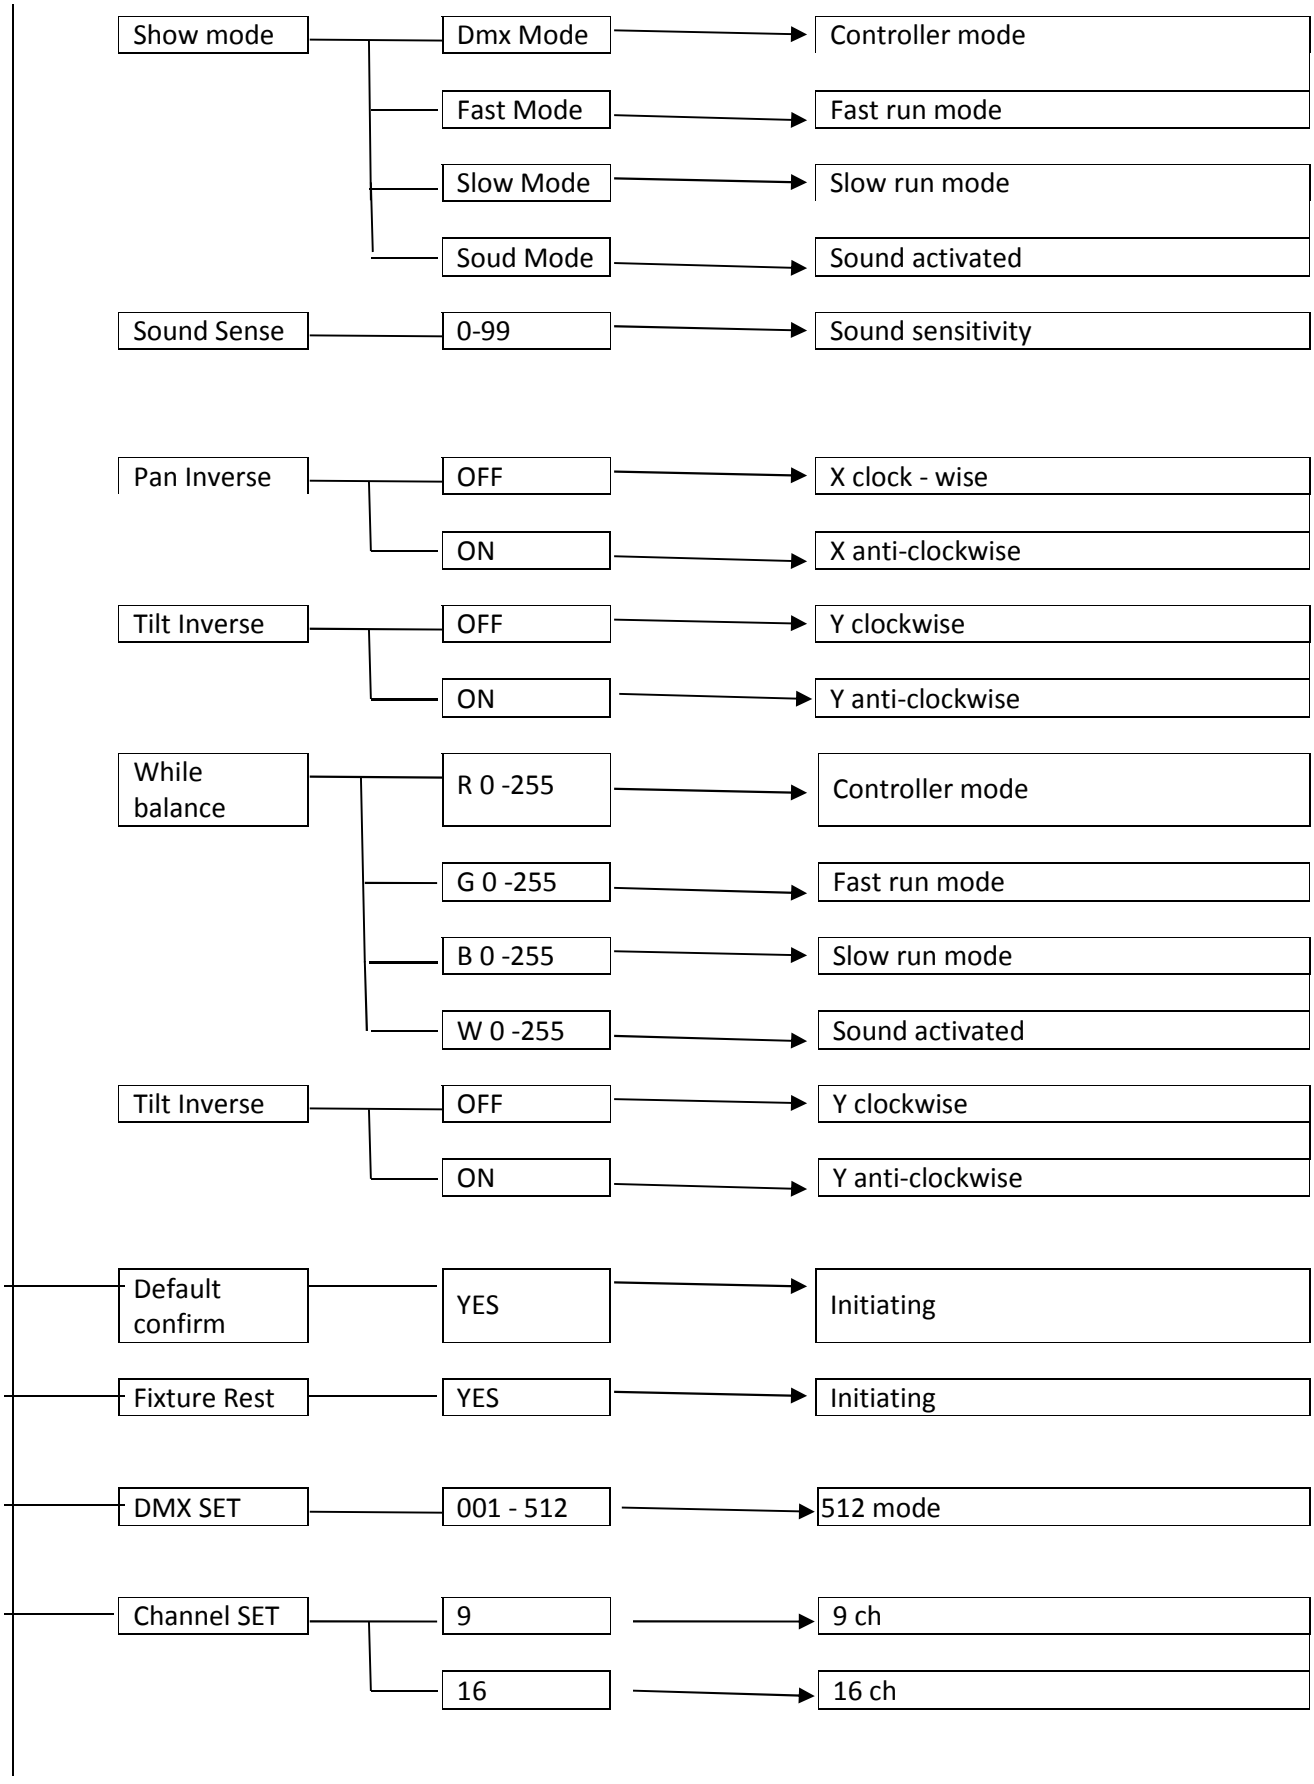
Show mode
Dmx Mode
Controller mode
Fast Mode
Fast run mode
Slow Mode
Slow run mode
Soud Mode
Sound activated
Sound Sense
0-99
Sound sensitivity
Pan Inverse
OFF
X clock - wise
ON
X anti-clockwise
Tilt Inverse
OFF
Y clockwise
ON
Y anti-clockwise
While balance
R 0 -255
Controller mode
G 0 -255
Fast run mode
B 0 -255
Slow run mode
W 0 -255
Sound activated
Tilt Inverse
OFF
Y clockwise
ON
Y anti-clockwise
Default confirm
YES
Initiating
Fixture Rest
YES
Initiating
DMX SET
001 - 512
512 mode
Channel SET
9
9 ch
16
16 ch