Trantec S5000 eng receiver

Press button under battery door functions:

Bank – change bank 1 to 4 using the encoder on the top of the pack

Freq – change the frequency using the encoder on the top of the pack

Gain – change the audio level gain using the encoder on the top of the pack

Rf cue – change the squelch level

Always return to the Freq menu then power down to save settings – then reboot.

The following 6 frequency are uk license free channel 70

All 6 will operate together

863.100
863.400
863.750
864.225
864.550
864.975

These are the first 6 frequencies of bank 1

Audio output is on a 5 pin lemo connector fgg series Ob

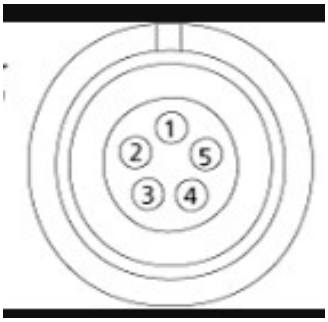

Image is of the solder view of the male connector which plugs into the s5000 eng receiver pack

PIN 1 – Ground

Pin 2 audio + output

Pin 3 Ground

Pin 4 power from camera external battery 10 v to 18v

Pin 5 audio – output

Trantec S5000 beltpack radio mic transmitter

Press button under battery door functions:

Press and hold on power upp – reset (some models only)

Press to cycles through the banks 1 to 4 (if programmed)

then power down to save settings – then reboot.

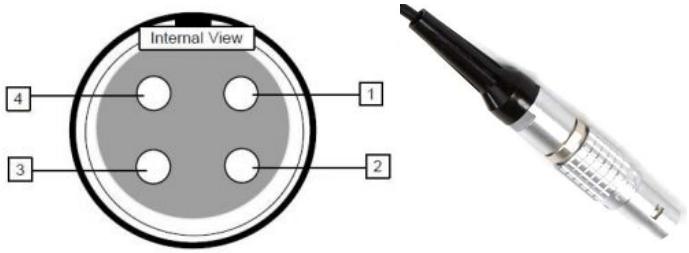

Pin Connections : Pin 1 Ground, Pin 2 +9v, Pin 3 Audio/+9v, Pin 4 Audio

Trantec TS259:	**Trantec TS33:**	**Trantec TS44:**
Pin 1 Screen	Pin 1 Screen	Pin 1 Screen
Pin 2 Not connected	Pin 2 Not Connected	Pin 2 Red
Pin 3 White	Pin 3 White and Red	Pin 3 Not Connected
Pin 4 Not Connected	Pin 4 Not Connected	Pin 4 White

Trantec TS55:	**Trantec TS912:**	**Sennheiser MKE2:**
Pin 1 Screen	Pin1 Screen	Pin 1 Screen
Pin 2 Red	Pin 2 Red	Pin 2 Not connected
Pin 3 Not Connected	Pin 3 Not Connected	Pin 3 Red
Pin 4 White	Pin 4 Yellow	Pin 4 Not Connected

Sony ECM77:	**Sanken COS-11PT:**	**Beyer MCE5:**
Pin 1 Screen plus Clear	Pin 1 Screen	Pin 1 Screen
Pin 2 Not Connected	Pin 2 Black	Pin 2 Red
Pin 3 Red	Pin 3 Not Connected	Pin 3 Not Connected